

# Medicinehaus Model WHCAR-35



## Installation Instructions

### 1. Please check the accessories for installation

- a) Hook..... 1pc
- b) Level.....1pc
- d) 8mm nylon anchors..... 2pcs
- e) M5 screws.....2pcs ①
- f) M4 screws.....2pcs ②

#### Maintenance:

1. Cabinet should always be cleaned with a soft, damp cloth or leather. All parts must be wiped dry after use or cleaning. A little mild liquid soap can be added to lukewarm water to remove stubborn stains.



Never use acetic or citric, glass cleaning agents, scouring powder or solvent-base cleaners or other chemicals.





2. Mirrors should only be cleaned with a damp chamois leather. Do not use commercial glass-cleaning agents. The mirror edges should be wiped dry only.

### 2. During installation, the following tools may be needed

- a) Measuring tape
- b) Hammer-drill with 8mm drill bit
- c) Crosshead screw driver

### 3. Installation Steps

- a). Make sure the wall is ready to accept the medicine cabinet. When you anchor the cabinet to the wall, make sure there are no electrical wires, water pipes, or gas pipe behind the wall.
- b). Level and fix the hook.
- c). Hang the mirrored cabinet carefully on the hook. Make sure the cabinet is fixed on the hook well.
- d). Remove the binding tape and the plastic form in the cabinets.

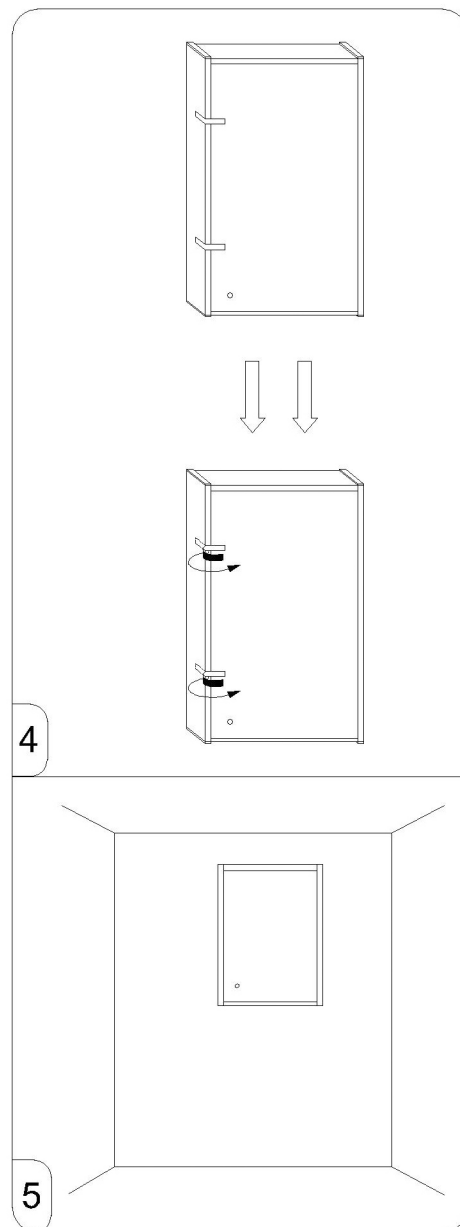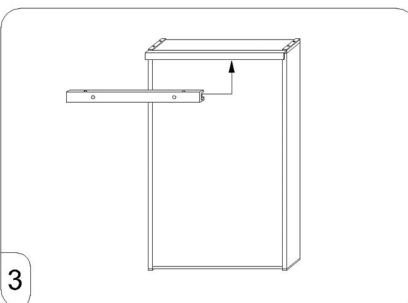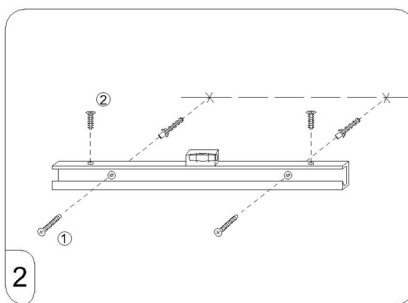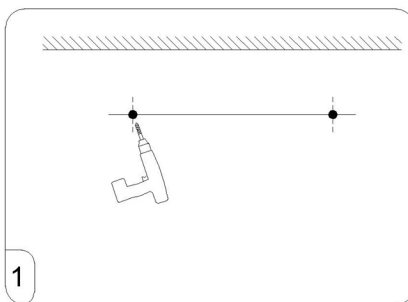

5

